



Instructions  
for use

# 2 SLICE MOTORISED TOASTER



TS 4011

**2 SLICE**

S M A R T

T O A S T E R

## CONTENTS

2	Congratulations
4	CATLER Recommends Safety First
6	Know Your TS 4011 Toaster
7	Operating Your TS 4011 Toaster
8	TOAST/CANCEL button
8	A BIT MORE button
9	CRUMPET button
9	DEFROST button
10	Innovative Lift & Look feature
10	Using the Bun Rack
11	Care and Cleaning

# Congratulations

on the purchase of your new TS 4011 Toaster.



At Catler, we are proud of our innovations. Our appliances are designed to be the best in their class. When we set out to design this toaster, we were determined to create an exceptional toaster, one that would stand proud in any kitchen.

Unique features, such as automatic one-press Lift and Look and A Bit More ensure that you can monitor and control the progress of your toast.

The toaster's outstanding craftsmanship, made from heavy duty die cast materials and intelligent controls, makes this not only a durable but versatile toaster.

**This is why we are confident that you will find the TS 4011 toaster to be the best of Catler.**

**Enjoy!**



## CATLER RECOMMENDS SAFETY FIRST

We at Catler are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions:

### IMPORTANT SAFEGUARDS FOR YOUR TS 4011 TOASTER

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Carefully read all instructions before operating and save for future reference.
- Remove and safely discard any packaging material or promotional labels before using the toaster for the first time.
- Do not place the toaster near the edge of a table, counter or bench top during operation. Ensure the surface is level, clean and free of water.
- Do not place the toaster on or near a hot gas or electric burner, or where it could touch a heated oven.
- Do not place anything on the toaster and keep it clear of walls and other heat sensitive materials such as cloths and curtains. Provide adequate space for air circulation on all sides of the appliance.
- In terms of fire safety, toaster applies to the standards in the European Union. In the meaning of these standards, a toaster is considered as an appliance which can be operated on the table or similar surface if safety distance from flammable materials of min 500 mm is maintained in the radiation direction and in other directions min. 100mm.
- Do not use the toaster on sink drain board.
- Always ensure the toaster is properly assembled before use. Follow the instructions provided in this book.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Do not use a toaster to heat a room!
- Do not turn a toaster on in advance as it heats immediately!
- Toaster is portable and is provided with portable power cord which provides double-pole disconnection from the mains.
- In case of use an extension cable it is necessary to ensure the extension cable is not damaged and it should apply to valid standards.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge the bread carriage.
- Do not place to toaster or on the toaster sugary or buttered bakery as it tends to melt and flow.
- Do not toast bread or pastry wrapped, e.g. in aluminium foil, paper, etc.
- Never cover toasting slots and never insert your fingers or metal tools in the slots! Do not place any object on the toaster.
- Do not place toaster directly on top of toasting slots to warm toast as this may prevent correct air circulation and damage the appliance.
- Do not move the toaster whilst in operation or when hot. When operating, use a toaster not to hurt yourself (e.g. burnings).
- Do not touch hot surfaces. Use side areas for lifting and carrying the appliance.
- Do not leave the toaster unattended when toasting.
- In case of fire caused for example by burning food, turn off the toaster immediately and disconnect from the mains.
- Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.
- Do not allow breadcrumbs to accumulate in the bottom of the toaster. Failure to clean the crumb tray regularly may result in a fire hazard.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.
- Keep the appliance clean. Follow the cleaning instructions provided in this book.

## IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Check the date on the rating label corresponds to that in your mains. Plug of power cord must be plugged into a properly wired and grounded power outlet which applies to the standards in the European Union.
- Do not plug the power cord into a power outlet or remove with wet hands or pulling the power cord.
- Do not let the power cord hang over the edge of a table or counter, touch hot surfaces, or become knotted.
- To protect against electric shock, do not immerse power cord, power plug or appliance in water or any other liquid.
- Do not use this appliance for other than its intended use. This appliance is intended for household use only. Do not use in moving vehicles or boats. Do not use outdoors.
- It is recommended to regularly inspect the appliance. Do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Catler service centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Catler Service Centre.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30 mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

---

*THIS CATLER TOASTER IS ELECTRONICALLY CONTROLLED AND WILL NOT OPERATE UNTIL THE TOASTER IS PLUGGED INTO A 230/240 V POWER POINT AND SWITCHED ON.*

### NOTE



NEVER OPERATE TOASTER ON ITS SIDE. NEVER ADD ANY FOOD SUBSTANCE TO THE BREAD, MUFFINS OR CRUMPETS AS THIS CAN LEAD TO ELECTROCUTION OR FIRE. THIS TOASTER IS FOR TOASTING BREAD, CRUMPETS AND MUFFINS ONLY. PLACING OTHER ITEMS IN THE TOASTER CAN LEAD TO ELECTROCUTION OR FIRE.

## KNOW YOUR TS 4011 TOASTER





## OPERATING YOUR TS 4011 TOASTER

Before first use, remove any packaging material or promotional labels attached to your toaster.

1. Insert the power plug into a 230/240 V power outlet then turn the power on. The TOAST/CANCEL button surround will illuminate in blue. The LED toasting progress indicator will illuminate in blue from left to right and then align to the selected browning setting (indicated by the position of the browning control slide). The toaster will revert to standby mode after 30 seconds if a button is not pressed or the browning control slide is not adjusted.
2. Place one slice of bread, one crumpet or half an English muffin or half a bagel only, into each of the toasting slots. Ensure items for toasting are not too large or too thick to fit in the toasting slots.  
The TS 4011 has a single browning control slide and row of function buttons that simultaneously control the two toasting slots.
3. Select the desired browning setting by adjusting the browning control slide on the front of the toaster. The browning settings range from '1' (lightest) to '5' (darkest). The LED toasting progress indicator will illuminate in blue and align to the selected browning setting (as indicated by the position of the browning control slide).

*WHEN USING THE TOASTER FOR THE FIRST TIME, WE SUGGEST TOASTING ON THE MAXIMUM SETTING WITHOUT BREAD. THE TOASTER MAY EMIT A THIN SMOKE OR DISTINCT ODOUR ON INITIAL USE. THIS IS NORMAL AND NOT DETRIMENTAL TO THE PERFORMANCE OF THE TOASTER.*

### NOTE

*WHEN USING THE TOASTER FOR THE FIRST TIME, IT IS SUGGESTED TO TOAST ON BROWNING SETTING '3'. VARIOUS TYPES OF BREAD AND PERSONAL PREFERENCE MAY REQUIRE A DIFFERENT BROWNING SETTING. FOR EXAMPLE, RAISIN TOAST AND WHITE LIGHT-TEXTURED BREADS MAY REQUIRE A LIGHTER SETTING, WHILST HEAVIER TEXTURED RYE BREADS MAY REQUIRE A DARKER SETTING.*

### NOTE

4. To start the toasting process, press the TOAST/CANCEL button on top of the toaster. The TOAST/CANCEL button surround will illuminate in red and the carriage will automatically lower into the toasting slots which start the toasting cycle. As the carriage automatically locks into position, the Lift & Look button surround will illuminate in blue and the LED toasting progress indicator (above the selected browning setting) will flash and start to gradually count down (towards the left) indicating the toasting progress.
5. The Lift & Look button can be pressed up until 10 seconds before the end of the toasting cycle to view the browning of the bread. When selected, the Lift & Look button surround will flash and the LED toasting progress indicator will remain steady (indicating that the selected browning setting has not been interrupted by the carriage rising). The toasting recommences immediately as the carriage lowers and locks into position, and as indicated by the Lift & Look button surround illuminating and the LED toasting progress indicator flashing.



DO NOT LEAVE THE TOASTER UNATTENDED WHEN IN USE AS TOAST MAY JAM. IN THE UNLIKELY EVENT THAT BREAD, CRUMPETS OR MUFFINS BECOME JAMMED IN THE TOASTING SLOTS, ALL THE BUTTONS AND THE LED TOASTING PROGRESS INDICATOR WILL FLASH AND THE ELEMENTS WILL TURN OFF. SWITCH THE TOASTER OFF AT THE POWER OUTLET, REMOVE THE POWER PLUG AND ALLOW THE TOASTER TO COOL COMPLETELY BEFORE CAREFULLY EASING THE BREAD OUT OF THE SLOTS. TAKE CARE NOT TO DAMAGE THE ELEMENTS.

6. Approximately 10 seconds before the end of the selected browning setting, the Lift & Look button will cease illumination. As the toasting stops and the carriage rises, the TOAST/CANCEL button surround will flash and the LED toasting progress indicator will cease flashing. The LED toasting progress indicator will re-illuminate to the previously selected browning setting.
7. Once the toasting cycle has completed and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the toast. The TOAST/CANCEL button surround will re-illuminate in blue for up to 30 seconds, ready for the next toasting cycle.

*THE TOASTER WILL REVERT TO STAND-BY MODE AFTER 30 SECONDS IF A BUTTON IS NOT PRESSED OR THE SLIDE IS NOT ADJUSTED. THE TOAST/CANCEL BUTTON SURROUND AND LED TOASTING PROGRESS INDICATOR WILL CEASE ILLUMINATION.*

#### NOTE

*THE TOASTER WILL RE-ACTIVATE FROM STAND-BY MODE AND THE TOAST/CANCEL BUTTON SURROUND AND LED TOASTING PROGRESS INDICATOR WILL ILLUMINATE WHEN:*

- A. ANY OF THE BUTTONS ARE PRESSED.
- B. THE BROWNING CONTROL SLIDE IS MOVED.
- C. THE POWER AT THE POWER OUTLET IS TURNED OFF THEN ON AGAIN.

#### NOTE

### TOAST/CANCEL BUTTON

The TOAST/CANCEL button surround will illuminate in blue for up to 30 seconds when the appliance is turned on. The toaster will revert to stand-by mode after 30 seconds if a button is not pressed or the browning control slide is not adjusted.

- Press the TOAST/CANCEL button once to lower the carriage and start the toasting process. The TOAST/CANCEL button surround will then illuminate in red.
- Press the TOAST/CANCEL button during operation to cancel the toasting process or any other function. The TOAST/CANCEL button illumination will change from red to blue and stay illuminated for up to 30 seconds.

*TOASTING CAN BE STOPPED AT ANY TIME BY PRESSING THE TOAST/CANCEL BUTTON LOCATED ON THE TOP OF THE TOASTER. THIS WILL CANCEL THE OPERATION AND THE CARRIAGE WILL MOVE TO THE RAISED POSITION.*

#### NOTE

*THE TS 4011 TOASTER FEATURES A LIFT & LOOK BUTTON. THIS AUTOMATICALLY RAISES THE CARRIAGE WITHOUT CANCELLING OR RESETTING THE SELECTED BROWNING SETTING. USE THE LIFT & LOOK BUTTON TO VIEW BROWNING PROGRESS DURING THE TOASTING AND, IF NECESSARY, CANCEL THE PROCESS WHEN THE DESIRED TOAST COLOUR IS ACHIEVED.*

#### NOTE

### A BIT MORE button

This feature can be selected after or during the toasting cycle.

To use this feature during the toasting cycle:

- 1a. The A BIT MORE button surround will illuminate in blue when selected. The toasting time will automatically increase but will not illuminate more of the LED toasting progress indicator. A BIT MORE function can be cancelled by pressing the A BIT MORE button again and the original toasting cycle will continue.

To use this feature after the toasting cycle has completed:

- 1b. The A BIT MORE button surround will illuminate in blue when selected. The carriage will automatically lower and begin the additional toasting time. The LED toasting progress indicator will automatically align with the lowest browning setting then flash and count down for the additional browning time.
2. The TOAST/CANCEL button surround will also illuminate in red and the Lift & Look button surround will illuminate in blue allowing you to check on the toasting progress and, if necessary, cancel the cycle by pressing the TOAST/CANCEL button when the desired toast colour is achieved.
3. Approximately 10 seconds before the end of the additional browning, the Lift & Look button will cease illumination. As the toasting stops and the carriage rises, the TOAST/CANCEL button surround will flash, the LED toasting progress indicator

will cease flashing and the A BIT MORE button surround will cease illumination. The LED toasting progress indicator will re-illuminate to the previously selected browning setting.

4. Once the toasting cycle has finished and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the toast. The TOAST/CANCEL button surround will re-illuminate in blue for up to 30 seconds, ready for the next toasting cycle.

---

*A BIT MORE BUTTON CAN BE USED WITH THE TOAST, CRUMPET AND DEFROST FUNCTIONS.*

#### NOTE

### CRUMPET button

This feature activates additional heat to the middle heating elements to perfectly toast crumpet tops and lightly toast the crumpet bases or to toast the inner side of the cut bagel, whilst slightly warming the outside of the bagel.

To toast crumpets:

1. Place the crumpets into the toasting slots with crumpet tops facing inwards as per the crumpet markings above the middle elements of the toaster or place the cut bagel into the toasting slots with cut sides of the bagel facing inwards as per the crumpet markings above the middle elements of the toaster.

2. Select the desired browning setting by adjusting the browning control slide on the front of the toaster. The browning settings range from '1' (lightest) to '5' (darkest).
3. Press the TOAST/CANCEL button and the surround will illuminate in red and then press the CRUMPET button and the surround will illuminate in blue. The crumpets will automatically lower into the toasting slots. The middle and side heating elements will automatically adjust.
4. The Lift & Look button surround will also illuminate in blue allowing the toasting progress to be checked and, if necessary, cancel the cycle by pressing the TOAST/CANCEL button when the desired toast colour is achieved.
5. Approximately 10 seconds before the end of the selected browning setting, the Lift & Look button will cease illumination. As the toasting stops and the carriage rises, the TOAST/CANCEL button surround will flash and the LED toasting progress indicator will cease flashing. The LED toasting progress indicator will re-illuminate to the previously selected browning setting.
6. Once the toasting cycle has finished and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the crumpets or bagel. The TOAST/CANCEL button surround will re-illuminate in blue for up to 30 seconds, ready for the next toasting cycle. The CRUMPET button surround will remain illuminated and should be pressed once to cancel if a subsequent toasting function is required. The CRUMPET button surround

will cease to illuminate after 30 seconds or when the appliance is switched off at the power point.

---

*PLACE THE CRUMPETS INTO THE TOASTING SLOTS WITH CRUMPET TOPS FACING INWARDS AS PER THE CRUMPET MARKINGS ABOVE THE MIDDLE ELEMENTS OF THE TOASTER OR PLACE THE CUT BAGEL INTO THE TOASTING SLOTS WITH CUT SIDES OF THE BAGEL FACING INWARDS AS PER THE CRUMPET MARKINGS ABOVE THE MIDDLE ELEMENTS OF THE TOASTER.*

#### NOTE

### DEFROST button

This feature activates additional toasting time required to toast frozen bread.

To toast frozen bread:

1. Place the bread into the toasting slots.
2. Select the desired browning setting by adjusting the browning control slide on the front of the toaster. The browning settings range from '1' (lightest) to '5' (darkest).
3. Press the TOAST/CANCEL button and the surround will illuminate in red then press the DEFROST button and the surround will illuminate in blue. The bread will automatically lower into the toasting slots. The toasting time will automatically increase.
4. The Lift & Look button surround will illuminate in blue allowing you to check on the toasting progress and, if necessary, cancel the cycle by pressing TOAST/CANCEL

button when the desired toast colour is achieved.

5. Approximately 10 seconds before the end of the selected browning setting, the Lift & Look button will cease illumination. As the toasting stops and the carriage rises, the TOAST/CANCEL button surround will flash and the LED toasting progress indicator will cease flashing. The LED toasting progress indicator will re-illuminate to the previously selected browning setting.
6. Once the toasting cycle has finished and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the toast. The TOAST/CANCEL button surround will re-illuminate in blue for up to 30 seconds, ready for the next toasting cycle. The DEFROST button surround will remain illuminated and should be pressed once to cancel if a subsequent toasting function is required. The DEFROST button surround will cease to illuminate after 30 seconds or when the appliance is switched off at the power point.

### **Innovative LIFT & LOOK feature**

This feature automatically raises and lowers the carriage so you can check progress without interrupting and/or cancelling the toasting cycle.

To select this feature:

1. The Lift & Look button surround will illuminate in blue during the toasting cycle and when using the A BIT MORE, CRUMPET and DEFROST features. You can press the Lift & Look button during toasting cycle to view the toasting progress. If selected, the Lift & Look button surround will flash. The LED toasting progress indicator will cease to flash indicating that the selected toasting cycle time has not been interrupted. When the Lift & Look cycle has finished, the toasting cycle will re-commence, indicated by the resumed flashing of LED toasting progress indicator.
2. Approximately 10 seconds before the end of the selected browning setting, the Lift & Look button will cease illumination and cannot be activated in this time.

### **Using the Bun Rack**

Place the bun warmer rack onto the slots at the top of the toaster, ensuring it is securely placed. Set the browning control to setting '1' only. Press the TOAST/CANCEL button to start. Wait for the toaster to switch off automatically, or press the TOAST/CANCEL button to switch the toaster off before removing the buns. Repeat the operation again if desired brownness is needed. Take care not to touch the metal parts of the bun rack as this will be hot.

## CARE AND CLEANING

1. Switch the toaster off at the power outlet and then remove the power plug from the power outlet. Allow the toaster to cool completely before cleaning.
2. To clean any crumbs from the toaster, remove the crumb tray, located under the control panel at the front of the toaster, by pulling it outwards. Empty and replace the crumb tray before using the toaster again. Replace the crumb tray by sliding it inwards until it locks into position.
3. To remove any additional crumbs, turn the toaster upside down over a bin and shake crumbs free.
4. Wipe the outside of the toaster with a slightly dampened soft cloth then polish with a soft dry cloth to dry completely.

*DO NOT CLEAN WITH METAL SCOURING PADS. PIECES CAN BREAK OFF THE PAD AND TOUCH ELECTRICAL PARTS CREATING AN ELECTRIC SHOCK HAZARD.*

### NOTE

### Storage

Switch the toaster off at the power outlet and remove the power plug from the power outlet. Allow the toaster to cool completely before storing. Follow the directions for cleaning and store in an upright position on a flat surface on a bench top or in an accessible cupboard. Do not store anything on top of the toaster.



DO NOT USE THE TOASTER WITHOUT THE SLIDE OUT CRUMB TRAY IN POSITION. DO NOT ALLOW CRUMBS TO BUILD UP IN THE CRUMB TRAY. FAILURE TO CLEAN THE CRUMB TRAY REGULARLY MAY RESULT IN A FIRE HAZARD.

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

Dispose of packaging material at a public waste disposal site.

## DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste. Alternatively in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection centre for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

### For business entities in the European Union

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

### Disposal in other countries outside the European Union

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



This product meets all the basic EU regulation requirements that relate to it.

Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

**NOTE:**

**NOTE:**



# 2 SLICE MOTORISED TOASTER

400 SERIES

CLASS GRADE TOOLS

Due to continued product improvement, the products illustrated/photographed in this brochure may vary slightly from the actual product.



W W W . C A T L E R . E U

CUSTOMER SERVICE

I N F O @ C A T L E R . E U